

TEMPERATURE AND HUMIDITY TRANSDUCER SUPPLIED FROM A CURRENT LOOP **P18L**



USER'S MANUAL

CE

Contents

1.	Application	2
2.	Basic requirements, operational safety	2
з.	Installation	2
	3.1. Assembly	2
	3.2. Electrical connections	
4.	Servicing	4
5.	Accessories	4
6.	Technical data	5
7.	Before a failure will be declared	5
8.	Oredering codes	6

1. Application

The P18L transducer is a device destined for the continuous conversion of relative humidity or ambient temperature into a standard analog current signal. The transducer is fixed on a wall.

Applied sensor shields enable the application of the P18L transducer in various ambient conditions

2. Basic requirements, operational safety



In the security scope, the transducer meets the requirements of the EN 61010 -1 standard.

Remarks concerning the operator safety:

1. General

• All operations concerning transport, installation, and commissioning as well as maintenance must be carried out by qualified, skilled personnel acc. to the section 3.2. of the user's manual.

• According to this basic safety information, qualified, skilled personnel are persons who are familiar with the installation, assembly, commissioning, and operation of the product and who have qualifications necessary for their occupation.

• In order to avoid any damage, before switching the supply on, it is recommended to ensure that all wires were correctly connected. Before the transducer assembly, one must pass supplying wires through the packing. Screw the packing seal in order to obtain the leaktightness. If the packing seal is not screwed, we cannot ensure the required IP65 leaktightness.

When unpacking the P18L transducer, please check whether the type and version code on the data plate correspond to the order code.

3. Installation

3.1. Assembly

The P18L transducer is designed to be mounted on a wall by means of a screw connection or glue without the loss of IP 65 tightness.

The transducer housing is made of a self-extinguishing plastics. Housing dimensions: $64 \times 58 \times 35$ mm.

The transducer has screw connectors placed inside the transducer, which enable the connection of external wires of 1 mm² cross-section. Overall dimensions and the fixing way are shown on the fig. 1

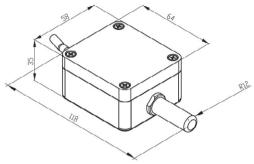


Fig 1. Overall dimensions of the P18L transducer

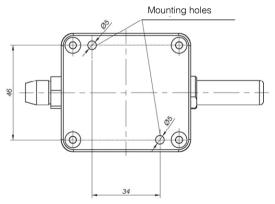


Fig.2. Lay-out of assembly holes of the P18 transducer

3.2. Electrical connections

The P18L transducer has 2 connecting terminals to which there is access after removing the cover of the transducer housing.

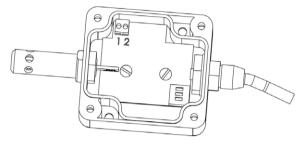


Fig.3 Marking of terminals for the connection of external signals




Fig. 4 Way of transducer electrical connections

In case of the transducer work in an environment with high interference, one must apply shielded wires. The shield must be connected to the nearest PE point from the feeder side.

4. Servicing

After connecting wires, closing and servicing the housing, and switching to the supply on, the transducer is ready to work.

The correct measurement result appears only after the time of the measurement initialisation ca 2.5 minutes.

After this laps of time, the analog output is correctly steered on. The transducer converts the temperature or relative humidity into a 4-20 mA standard current signal. The choice of the converted quantity is realized by means of the jumper

Nr 1 of the 3-position switch placed on the transducer plate. If the jumper Nr 1 is in the position "ON", the transducer converts the relative humidity. (Fig. 5).





b)

Fig. 5 Choice of the converted quantity: a) temperature, b) relative humidity

5. Accessories

As a standard, the P18L transducer is equipped with a metallic shield of the sensor, destined only for indoors application.

For other applications it is recommended to use additional sensor shields, depending on the transducer operation conditions.

Sensor protection shields

9

						10010
ltem	Order code	Design	Name	Construction	Features	Typical application
1	20-015-00- 00011		Membra- ne filter	Casing made of PC, Membrane of teflon lami- nated by a film. Pore size: 1 µm	Mean filtra- tion effect. Maximal temp.: up to 80°C Response time: t10/90: 15 s	Building automation. In rooms with low pollution.
2	20-015-00- 00007		Filter made of teflon	Sintered teflon. Pore size: 50 µm	High chemical resistance Maximal temp.: up to 180°C Response time:	Drying process in chemical applications

Table 1

t10/90: 14 s

6. Technical data

Basic parameters:

 range of relative humidity measurement (RH) 	0100% without condensation ¹⁾
- basic error of relative humidity conversion ¹⁾	± 2% for RH = 1090% ± 3% for remaining range
 hysteresis of the humidity measurement (T) 	± 1% RH
 range of temperature measurement (T) 	– 2060°C
 basic error of temperature conversion 	± 0.5% of the range
 additional errors temperature influence 	± 25% of the basic error/10°C
Analog output: - current - maximal load resistance of the current output	4 20 mA 500 Ω
Rated operating conditions:	
- supply	<u>1930</u> V d.c.
- consumption	< 1.5 VA
- ambient temperature	– 30 <u>23</u> 85°C
- relative air humidity	< 95% (admissible condensation)
- rate of air flow	2 m/s

¹⁾ In case of water vapour condensation on the sensor surface, the maximal error can increase to 3% $\rm RH$

15 minutes
IP 65
on a wall
125 g
$(35 \times 58 \times 118) \text{ mm}$
any
with the sensor chamber directed towards the ground.
acc. to EN 61000-6-2 acc. to EN 61000-6-4
acc. to EN 61010-1 III 2 50V

7. Before a failure will be declared

Possibilities of incorrect work of the P18L transducer Table 2.

Symptoms	Procedure
Data inconsistent with our expec-	In the version with analog outputs,
tations appear on the	check parameters of the individual
transducer output.	characteristic of analog outputs.

8. Ordering codes

Ordering codes of P18L transducer versions

Table 3.

Code	Description
P18L 000	Temperature and humidity transducer P18L, built-in temperature and humidity sensor, supplied from a current loop, 1 x analog output 4 20 mA; without any extra requirements

LUMEL



LUMEL S.A.

ul. Słubicka 4, 65-127 Zielona Góra, Poland tel.: +48 68 45 75 100, fax +48 68 45 75 508 www.lumel.com.pl

Technical support:

tel.: (+48 68) 45 75 143, 45 75 141, 45 75 144, 45 75 140 e-mail: export@lumel.com.pl

Export department: tel.: (+48 68) 45 75 130, 45 75 132 e-mail: export@lumel.com.pl

Calibration & Attestation: e-mail: laboratorium@lumel.com.pl 718L-09_R1